

Chucky Drawbar Kit Instructions

The Chucky Drawbar Kit consists of a 3" Chucky Arbor and a Chucky Wing Nut.

You must purchase your own length of 1/4" -20 All Thread available at most hardware stores.

Please Note: The JUMBO Convertible Chucky consists of a longer arbor; does not have a set screw and cannot be used for items outlined in #7 below. It is only to be used for the JUMBO Convertible Chucky. It is recommended that the Jumbo Convertible Chucky ONLY be used with the drawbar.

Failure to do so may cause it and the Arbor to dislodge from the spindle.

1. Thread the All Thread into the taper end of the Arbor.
2. Insert into the headstock spindle.
3. Thread the Chucky Wing Nut onto the All Thread so that it is tight against the back of the headstock.
4. Mark where you wish to cut off the excess All Thread.
5. Remove from headstock and cut the All Thread making sure there are no burrs on the end.
6. Re-install when necessary.
7. When adding anything (like a buff or sanding disk) to the threaded end of the Arbor, make sure to tighten the set screw to the shank of the said item.
8. Remove Chucky Drawbar Kit when not in use.

The safe use of any Rubber Chucky product is entirely the responsibility of the purchaser/user.

If you do not agree with this, please return the Rubber Chucky product immediately for a full refund.

Your use of any Rubber Chucky Products, LLC product will constitute your agreement to your responsibility

WWW.RUBBERCHUCKY.COM